 



1. LOCATION:

A. On branch lines up to 20' long.



B. On branch lines over 20' long.

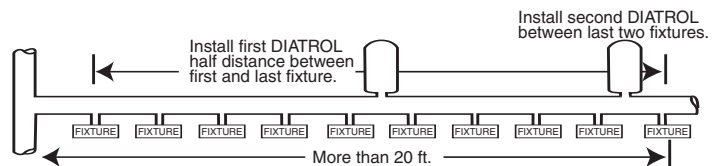

2. POSITION:

Install with body above pipe line,
preferably in a vertical position.

3. Only use wrench flats on fitting for final
tightening.

4. Factory pre-charge and ready for installation.

The DIATROL is factory charged with air to 40 PSIG. Most applications will not require adjustment; however, the air charge can be adjusted by removing the air valve cap. Pre-charge pressure should be equal to flow pressure for optimum performance.

**5. Install as close as possible to the offending
fixture.**